

ACTICHLOR™ PLUS


BLOOD SPILLS




1
Wear disposable gloves and apron. Safety glasses with side shields are required whilst handling the tablets granules and tablets only



2
Dispense Actichlor Granules directly onto the wet blood spill and leave for **2 minutes** and dispose as clinical waste.

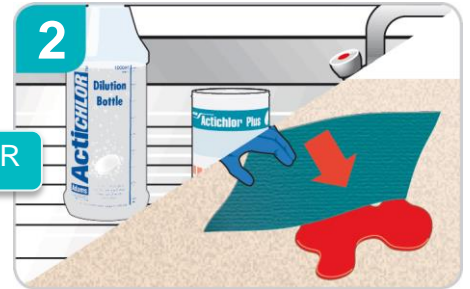


OR
2
Place paper towels over blood spill. Dissolve Actichlor Plus tablets (according to dilution instructions below) in cold water to make your solution. Carefully pour over towels. Leave for **2 minutes** and dispose as clinical waste

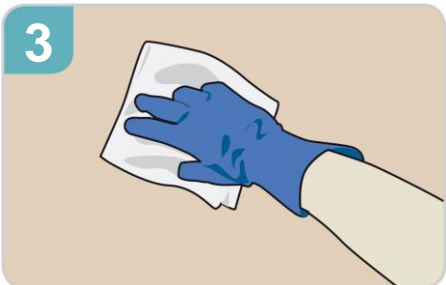

3
Clean and disinfect an area larger than the spill with your Actichlor Plus solution (prepared according to dilution instructions below)



4
Keep solution for no longer than 24 hours. Dispose of remaining solution into DSR or sluice drains. Rinse with running water

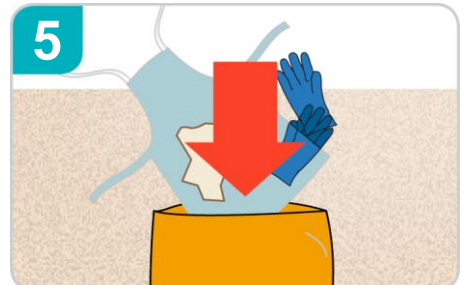


5
Dispose of gloves and apron as clinical waste. Wash hands after removing gloves and apron

DILUTION INSTRUCTIONS

DISINFECTION OF BLOOD SPILLS (10,000PPM AVAILABLE CHLORINE)			CONTACT TIME	
Disinfection of blood spills using Actichlor Plus 10,000ppm solution	Actichlor Plus 1.7g Tablets	1 tablet per 100ml	e.g. 5 tablets per 500ml	2 minutes
	Leave lid off dilution bottle until tablets have dissolved		e.g. 10 tablets per 1L	2 minutes
Disinfection of blood spills using Actichlor Granules	Actichlor Granules	No dilution required		2 minutes

WARNINGS & PRECAUTIONS

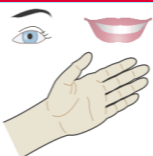

AVOID contact with skin and eyes. **DO NOT** breathe dust/fume/gas/mist/vapors/spray.



DO NOT use directly on urine or vomit. Mixing this product with acid or ammonia releases chlorine gas.



AVOID prolonged contact with stainless steel or clothing.



ALWAYS dispose used materials as clinical waste. Wash hands thoroughly after handling



ALWAYS keep container tightly closed. Store in a secure dry place in suitable labelled containers



ALWAYS keep out of the reach of children



ALWAYS dispose of each solution after 24 hours, refer to your SDS and hospital policy



USE ONLY with adequate ventilation

USE BIOCIDES SAFELY, ALWAYS READ THE LABEL & PRODUCT INFORMATION BEFORE USE
PLEASE REFER TO THE SAFETY DATA SHEET AND HOSPITAL POLICY